



How to set up your manual label dispenser

- 1 Unlock the load and lock bar by rotating the plastic knobs.

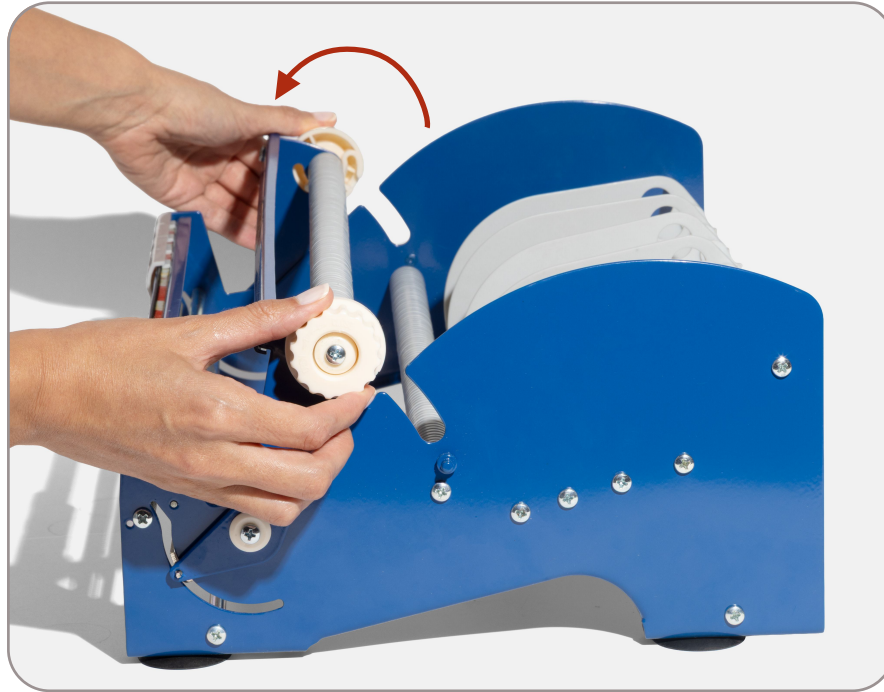

- 2 Use the knobs to lift the load and lock bar into its full forward position.

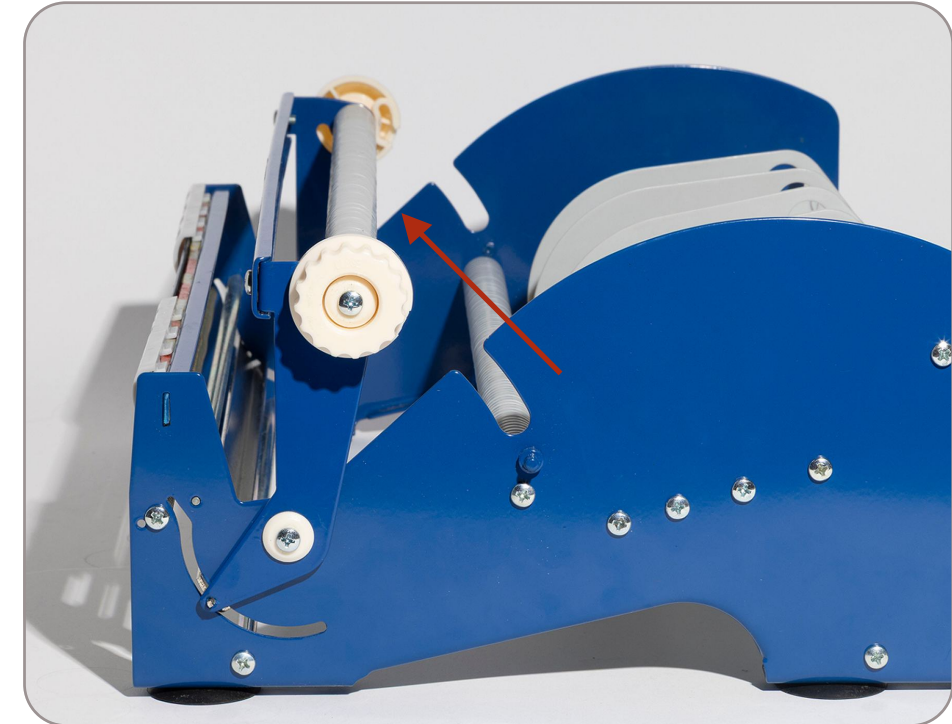

- 3 Place roll labels on the base rollers. Make sure they're positioned so that the adhesive side is facing down when the end is pulled.



- 4 Pull the ends of your roll labels forward about 10" and feed them underneath the upper two bars indicated below.




How to set up your manual label dispenser


- 5 Install the separators between each roll label.



- 6 Return the load and lock bar to its original position.

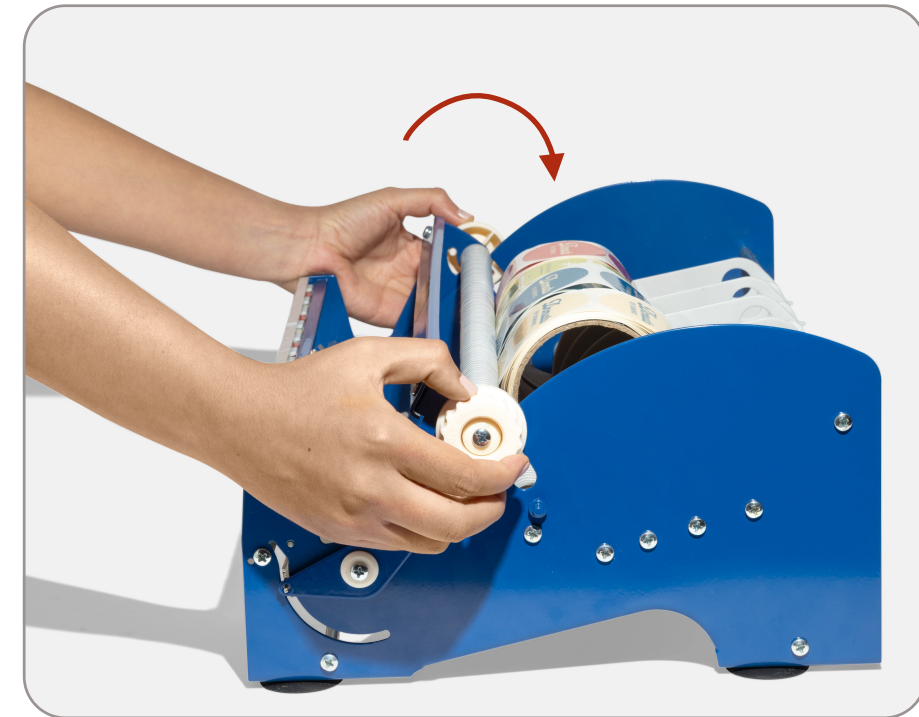

- 7 Tighten the plastic knobs to lock the bar into place.

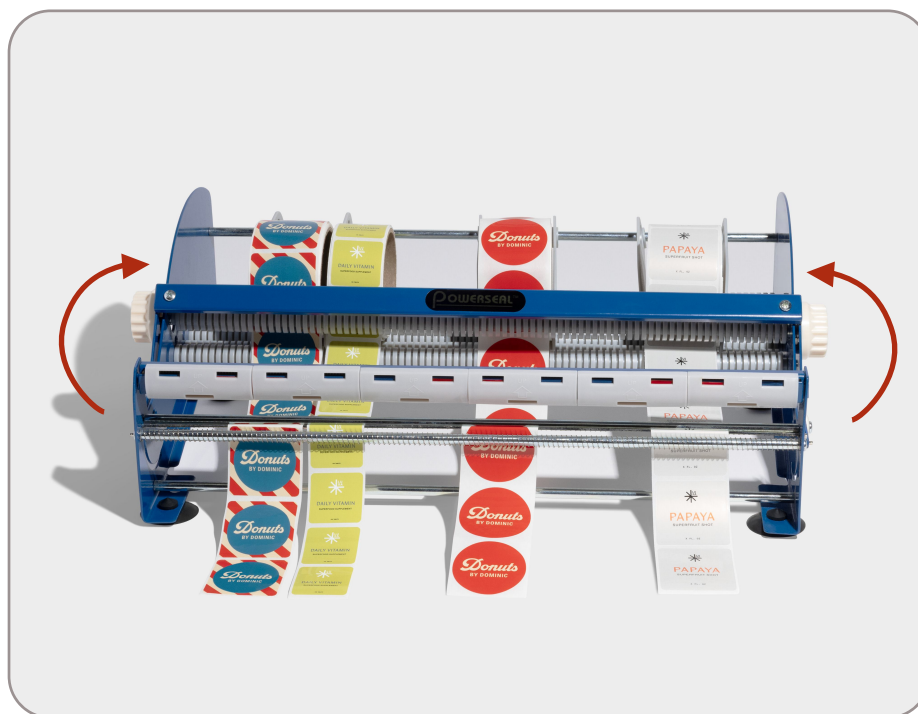

- 8 Carefully pull the liner forward – the adhesive will release automatically.

